
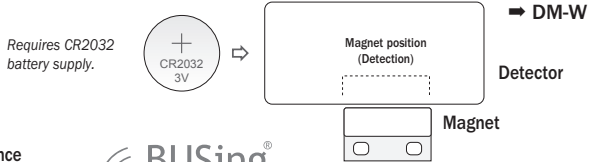


➔ DM

Installation

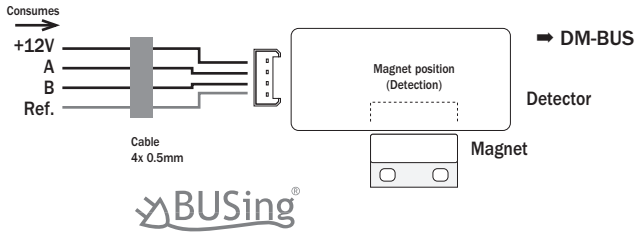


DM-W maintenance

*Must check and/or
replace the batteries at
least once every two years.*



Window or Door Location (depending on frame type).

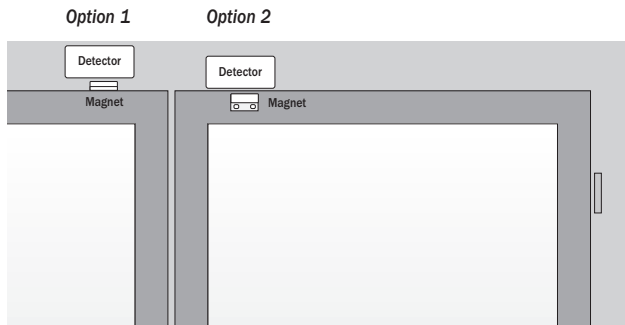

Orientation possibilities

