

➔ **KCtr**

 
Installation of Gas or Fire Detectors – Loop Type

Do not connect batteries over 3A/h







VERY IMPORTANT
Respect Polarity

Battery
Automatic loading
if KCtr with voltage



 Supply
230V AC ~ 50Hz
Optional
110V AC ~ 60Hz

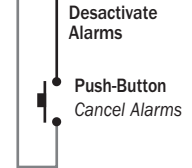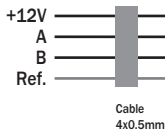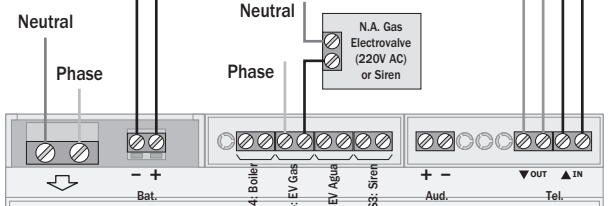


➔ **KCtr-W**



This device is available in wireless version.
No BUSing® wiring is required.



KCtr connection
Max. distance: 30m

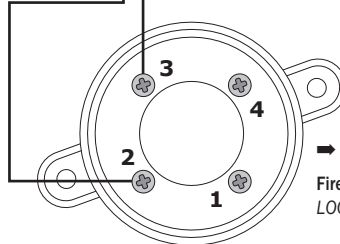

➔ DH ➔ DTV
Fire or Gas sensor
LOOP type

➔ **KCtr**


 
Installation of Gas or Fire Detectors – Contact Type

Do not connect batteries over 3A/h







VERY IMPORTANT
Respect Polarity

Battery
Automatic loading
if KCtr with voltage

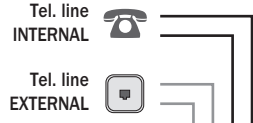

 
Supply
230V AC ~ 50Hz
Optional
110V AC ~ 60Hz

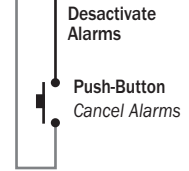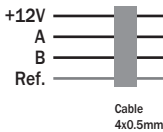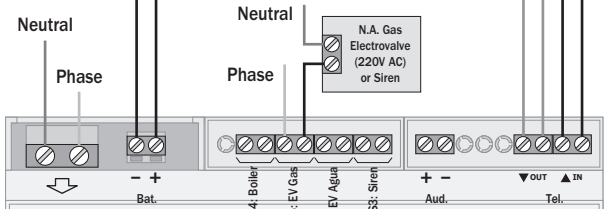

➔ **KCtr-W**



This device is available in wireless version.
No BUSing® wiring is required.

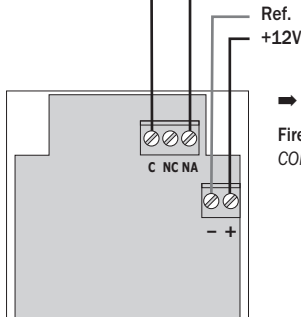

➔ **SG**
Fire or Gas sensor
CONTACT type

➔ **KCtr**

 
Installation of Intruder Detectors – Infrared Type

Do not connect batteries over 3A/h







VERY IMPORTANT
Respect Polarity

Battery
Automatic loading
if KCtr with voltage



 Supply
230V AC ~ 50Hz
Optional
110V AC ~ 60Hz

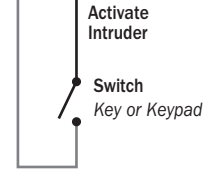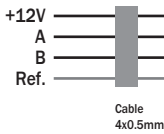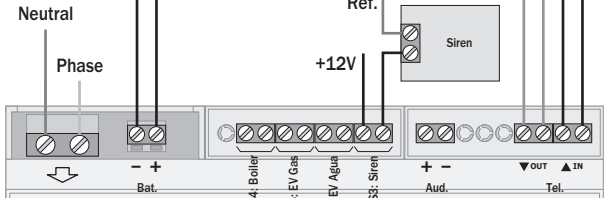

➔ **KCtr-W**




This device is available in wireless version.
No BUSing® wiring is required.



➔ **Slf**

Intrusion sensor
INFRARED type

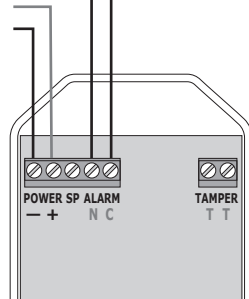

➔ **KCtr**

 
Installation of Flood Detectors - 2 wires

Do not connect batteries over 3A/h






VERY IMPORTANT
Respect Polarity


Battery
Automatic loading
if KCtr with voltage



 Supply
230V AC ~ 50Hz
Optional
110V AC ~ 60Hz

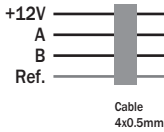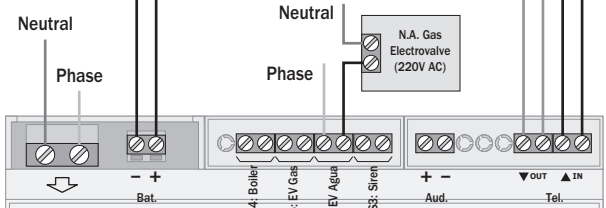

Flood Signal

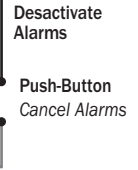


➔ **KCTR-W**



This device is available in wireless version.
No BUSing® wiring is required.



KCtr connection
Max. distance: 30m

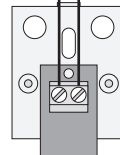

➔ **SIn**
Flood sensor
2 wires

➔ **KCtr**

Installation of Temperature Circuit



Do not connect batteries over 3A/h

VERY IMPORTANT
Respect Polarity

Battery
Automatic loading
if KCtr with voltage

Supply
230V AC ~ 50Hz
Optional
110V AC ~ 60Hz

BUSing®

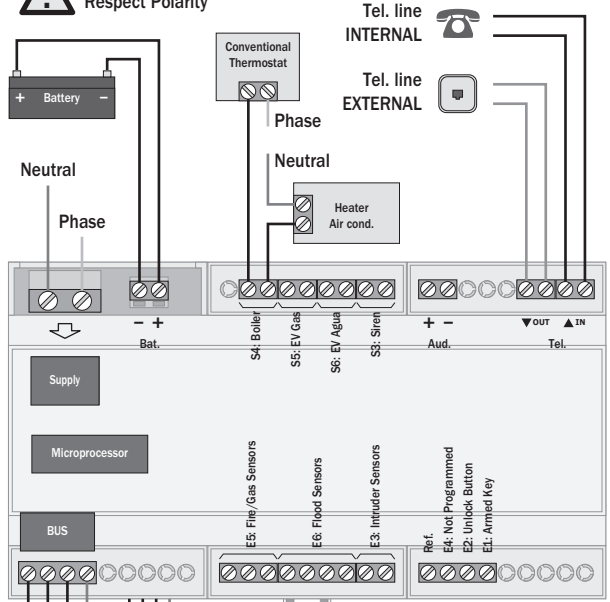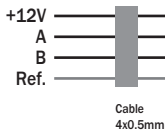

➔ **KCTR-W**



BUSing®

This device is available in wireless version.
No BUSing® wiring is required.

