


# ➔ RB300

## Installation

RB300 output wiring  
300VA supply

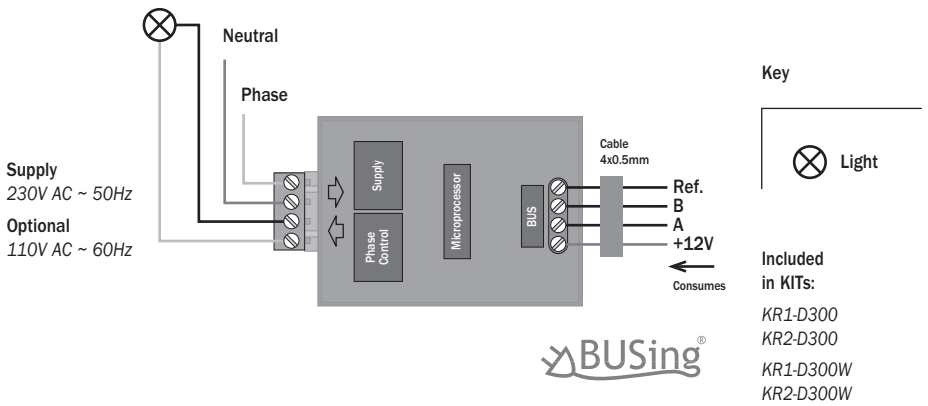

### Important

This device requires 230V and +12V supply to work properly.

## ➔ RB300-W inalámbrico wireless



This device is available in wireless version.  
No BUSing® wiring is required.

