

➔ RTC

Installation

Requires CR2032 battery in order to maintain the time in case of power cut.



RTC maintenance

Must check and/or replace the batteries at least once every two years.

