


# ➔ SIn


## Installation

Connection to KCtr  
EG: Flood Sensors  
Max. distance: 30m

See KCtr diagram  
Installation of Flood Sensors (2 wires type).

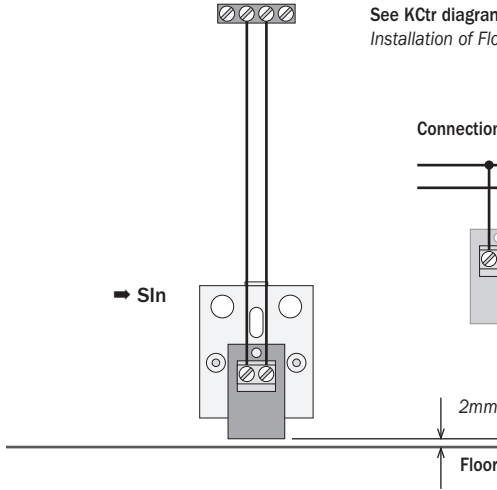

Connection of additional SIn sensors

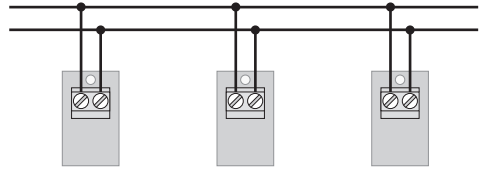

Wall installation

These devices must be installed in vertical position on the wall, with the sensor downside and at 2mm distance from the floor.

Consumes  
➔ +12V  
A  
B  
Ref.

Cable  
4x0.5mm

➔ SIn-BUS

BUSing®

Requires CR2032  
battery supply.



SIn-W maintenance

Must check and/or  
replace the batteries at  
least once every two years.

➔ SIn-W

BUSing®

inalámbrico  
wireless

2mm

Floor