
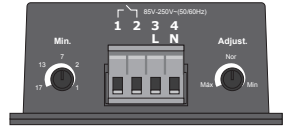


➔ SR

Installation

SR output wiring
Power consumption 80mA

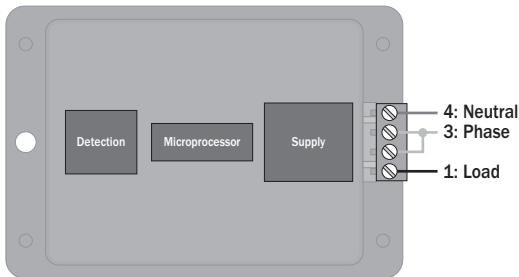


Timer adjustment (Min.)

- The timer adjuster regulates the time a load remains connected.
- Timers can be adjusted between 0.25secs (Pulse) and 17mins, at 4sec intervals.
- Minimum timings are obtained by turning the adjustment potentiometer clockwise.

Sensitivity adjustments (Adjust.)

- The sensitivity adjustment limits the degree of detection.
- Maximum distances that can be reached will depend upon the density of obstacles to penetrate (wood, plaster, brick, etc.).

Installation in a false ceiling

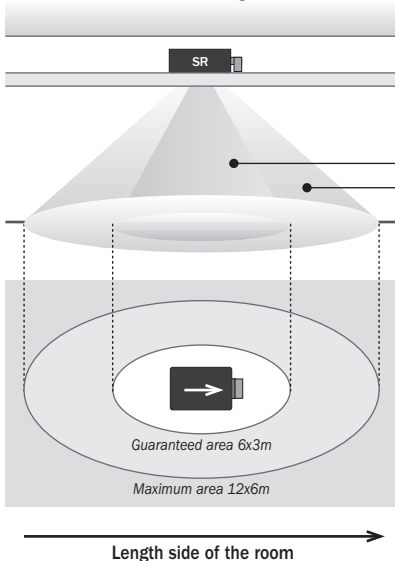

Detection area

The detection area must face the room, with the silk screened part of the device face-down.

Detection area at 2.5m from the floor:
Guaranteed: 6x3m
Maximum: 12x6m

The device can be partially blinded with metal tape to cancel detection in a zone/direction.

Floor

Direction of the device

Place lengthwise, with the length of the device parallel to the length of the room. Together with the programming, this will ensure optimal detection.

Do NOT install:

- In locations susceptible to vibrations.
- Over fluorescent lights.