


# ➔ SifLUX

## Installation

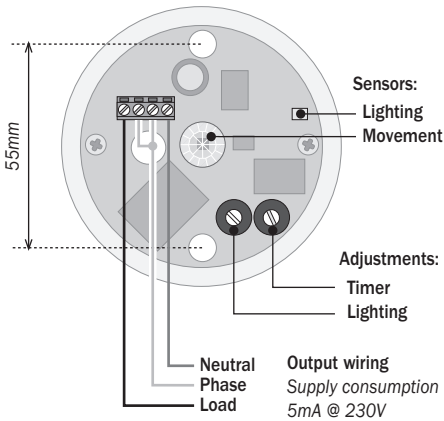


### Timer adjustment

- By the potentiometer show in the picture.
- Regulates the time the load is connected.
- Up to 4 minutes adjustment.
- Maximum timings are obtained by turning the adjustment potentiometer clockwise.

### Lighting adjustment

- By the potentiometer show in the picture.
- Regulates the brightness desired to allow the operation of the luminaire.
- The rotation of the potentiometer clockwise will cause the detector need more lighting to operate the output in case of presence detection.

### Installation in the ceiling

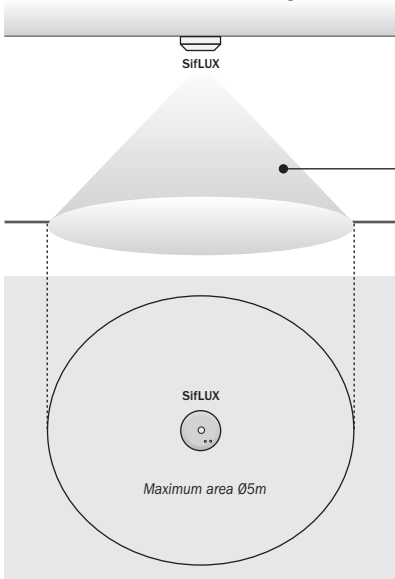

### Detection area

Consider the light sensor location in the plate to guide the light detection in the desired direction.

### Detection area at 2.5m from the floor:

Max. Ø5m

Floor

